

TreeTalker[®]Cyber

User Manual



Nature 4.0

Inspired to invent change

Index

Overview & Sensors

Introduction	Page 3
Sensors	Page 4
Sap Flow	Page 5
Dendrometer	Page 6
Spectrometer	Page 7
Accelerometer	Page 8
Temperature & RH	Page 9
Data string 4&5.	Page 10
Data string 6&7	Page 11
Data string 8	Page 12
Data Accessibility and Connectivity	Page 13

Installation

Tool list	Page 16
Trunk installation	Page 17
Sap Flow probe installation	Page 18
Dendrometer installation	Page 19
Cloud installation	Page 21
TTCyber Direct Interface Protocol	Page 22

Nature 4.0

Introduction

At Nature 4.0, we are committed to providing high-quality sensing solutions for environmental monitoring. Since 2018, our flagship system, TTCyber, has been carefully developed and fine-tuned to deliver highly granular time series data. This system is focused on fundamental approaches to plant ecophysiological monitoring, allowing us to capture intricate details about plant health and environmental interactions. TTCyber empowers researchers and environmentalists with precise, real-time insights, helping to drive sustainable practices and enhance our understanding of ecosystem dynamics.

Understanding scientific approach

Our scientific approach at Nature 4.0 is rooted in rigorous research, driven by the expertise of Professor Riccardo Valentini and our dedicated PhD research team. We emphasize a holistic understanding of ecosystem dynamics, combining cutting-edge sensor technologies with deep knowledge of plant ecophysiology. Under Professor Valentini's guidance, we integrate innovative methodologies with traditional scientific principles, enabling us to address complex environmental challenges and deliver impactful, data-driven solutions for sustainable environmental management.

What's the reason

In today's world, the importance of understanding and monitoring ecosystem dynamics has never been greater. With the accelerating impacts of climate change, biodiversity loss, and environmental degradation, having precise and real-time data on plant health and ecological processes is crucial for making informed decisions. Systems like TTCyber, developed with expertise from leading scientists like Professor Riccardo Valentini and our PhD research team, provide the detailed insights needed to mitigate these global challenges. By applying advanced monitoring technologies, we can better understand how ecosystems are responding to stressors, ultimately fostering more sustainable land management, climate resilience, and conservation efforts.

“By understanding plant physiology and information analytics, we can provide state of the art sensing solutions for fine scaled real time plant monitoring”

TreeTalker®Cyber

Overview

The TreeTalkerCyber is an advanced device designed to monitor forest ecosystems by providing real-time, high-resolution data on tree physiology, environmental conditions, and forest health. A cybernetic evolution of the TreeTalker series, it is equipped with sophisticated sensors that collect information on tree growth, sap flow, water transport and carbon sequestration. This device integrates state-of-the-art Internet of Things (IoT) technology, enabling it to wirelessly transmit data to a centralized platform for analysis.

One of TreeTalkerCyber's key features is its ability to measure tree vitality and stress levels by monitoring fluctuations in sap flow, moisture, temperature, and internal water movement. In addition, it can detect environmental variables such as light intensity and weather conditions through on-board temperature and humidity sensors, creating a comprehensive ecological profile. Its sensors are also designed to track long-term changes in biomass through a dedicated radial dendrometer, allowing researchers to assess how trees respond to climate change, drought and other environmental stressors.

TreeTalkerCyber is particularly valued for its autonomous data collection capabilities, making it an indispensable tool for forest researchers. Its integration with cloud-based analytics enables remote monitoring and predictive modeling, offering insights into forest dynamics, biodiversity, and carbon cycles at an unprecedented scale. This it a critical tool for climate research and sustainable forest management globally.



Sensors

1. Spectrometer

The spectrometer (TetraSpec) offers 28-channel spectral analysis, covering the visible to near-infrared range (410 nm to 1000 nm). Powered by AS7265x and AS7341 sensors, it offers accurate and versatile spectral sensing for a wide range of applications.

2. Sap flow Probe

TreeTalker®Cyber offers two types of three-needle sap flow probes: the “Probe Forest” (28 mm in length) and the “Mini Probe” (6 mm in length), both designed to measure lymph velocity using customizable HPV (heat pulse velocity) methods.

3. Radial dendrometer

The TTCyber supports a high-precision magnetic radial dendrometer with a measurement resolution of <1 micron, providing a near real-time view of stem increment.

4. Temperature and humidity


Temperature and humidity sensors are integrated into the main system hardware and provide accurate and precise measurements of temperature and humidity flows.

5. Accelerometer


The device also includes an accelerometer to determine the inclination and corresponding standard deviations of a tree in different directions, xyz, contributing to the understanding of its stability.

Sap Flow

TTCyber offers two variations of its three-probe configuration sap flow probes: the "TT-Cyber Probe Forest," equipped with 28 mm long and 2 mm diameter needles, and the "TT-Cyber W," featuring 6 mm long and 2 mm diameter needles. Both types of probes have needles positioned 7.5 mm apart and are equipped with three thermistors, positioned in series across each needle.

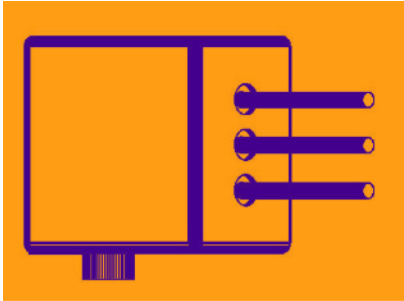

The default method employed for measuring sap velocity is the heat pulse velocity family (HPV) methods with 6 sec duration of heat pulse in hourly interval measurements. The energy input is approximately 780 (J m⁻¹). Temperature readings from the thermistors in the TTCyber's sap flow probe consists of three measurements: the downstream probe (TD), the heater (TM), and the upstream probe (TU). These temperature readings are captured approximately every 13 seconds, covering maximum measurement points, and are recorded as sensor digital numbers. The sensor digital numbers are inverted into Temperature Degrees Celsius by way of a calibration function as described below.

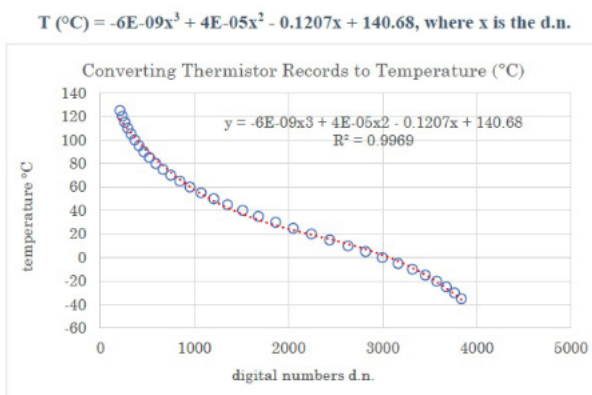

Applying the HRM (Heat Ratio Method) temperature changes both upstream and downstream of a heater probe after a heat pulse is emitted. We analyze the ratio of these temperature changes at equidistant points to estimate sap flow velocity.


$$V = \frac{D}{X} \ln\left(\frac{\Delta T_D}{\Delta T_U}\right)$$

Where:

V = Heat pulse velocity

D = is the thermal diffusivity ΔT_D and ΔT_U = are the temperature increases in downstream and upstream probes.


X =is the distance between the heater and the temperature probes.

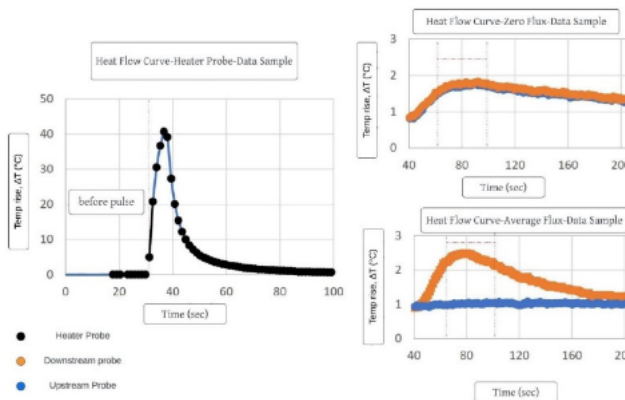

$$\Delta T = \frac{H}{4\pi Kt} \exp\left(-\frac{pc((x - Vt)^2 + y^2)}{4Kt}\right)$$

where:


ΔT is the temperature difference at a point (x, y) from the heater, V is the heat velocity, K is thermal conductivity, and (x, y) is volumetric heat capacity (Marshall, 1958; Vandegehuchte & Steppe, 2012).

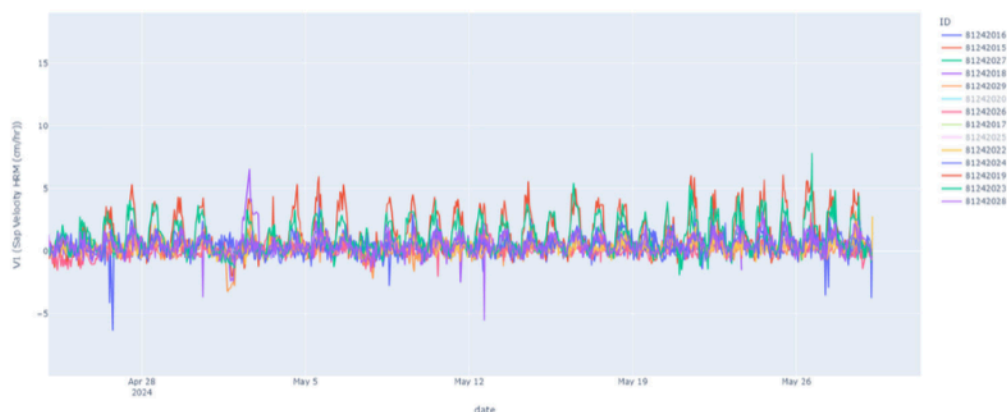

Dendrometer


The TTCyber includes a high resolution radial dendrometer to detect fine scaled changes in stem growth increment and diel stem dynamics.

The dendrometer is suitable for trees with a diameter at breast height (dbh) of 7cm or more. This criterion is set because of the installation process, which includes drilling two 3mm diameter holes at a depth of 18mm. This method may pose a risk of harming the plant tissue, particularly in smaller trees.

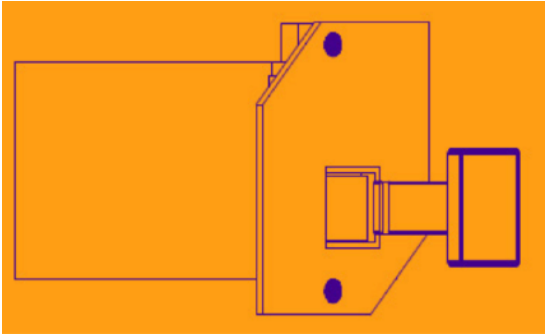



The dendrometer is designed for trees with a diameter at breast height (dbh) of 7cm or more. This requirement is based on the installation process, which involves drilling two 3mm diameter holes at a depth of 18mm. This approach could potentially harm the plant tissue, especially in smaller trees. The system operates based on hall mechanics and utilizes an incremental linear magnetic encoder (LME) at its core. Furthermore, it is built to withstand diverse weather conditions and features a durable measurement system for multi-year monitoring.

Sensor Features	
Supply Voltage	3.3V
Measurement range	0 — 35cm
Digital number range	0 — 4096 over 2mm dipole
Operating temperature	-40°C — + 80°C
Measurement resolution	0.488 μ m (12bit / 2mm pole pair)
Temperature sensitivity	0.13 μ m change per 1°C

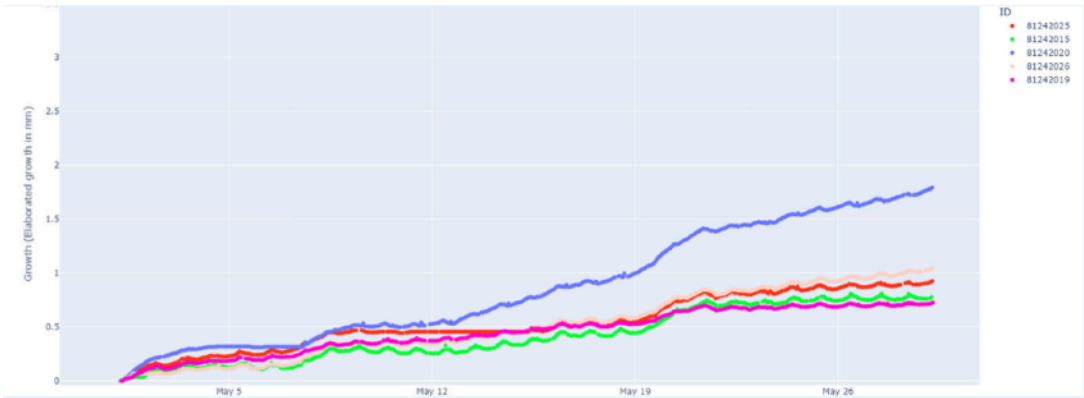


Spectrometer

The TTCyber Spectrometer, also known as TetraSpec and illustrated in Figure 6, is composed of a fusion of four chipsets that integrate AS7265x and AS7341 spectral devices. AS7265x, an 18-channel multispectral sensor, comprises AS72651, AS72652, and AS72653, and operates within a wavelength range of 410 nm to 940 nm, with a full width at half maximum (FWHM) of 20 nm. Among the AS7265x family, AS72651 (610 nm to 860 nm) acts as the primary unit, working in conjunction with AS72652 (560 nm to 940 nm) and AS72653 (410 nm to 535 nm) as detailed in Figure 8. The fourth sensor, AS7341, is a 10-channel spectrometer with an approximate FWHM of 30 nm, functioning within the spectrum of 415 nm to 1000 nm. This includes 8 channels in the visible (VIS) region, one channel in the near-infrared (NIR) region, and one clear channel. These multi-spectral sensors are flexible instruments for spectral analysis, with the ability to distinguish different attributes within the visible and near-infrared (NIR) range. Hereafter, you will encounter an extensive depiction of the varied spectral and optical traits demonstrated by these sensors.

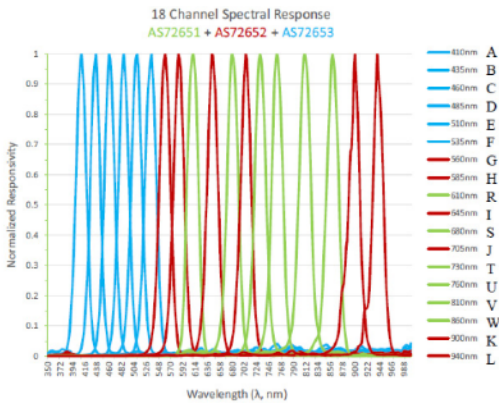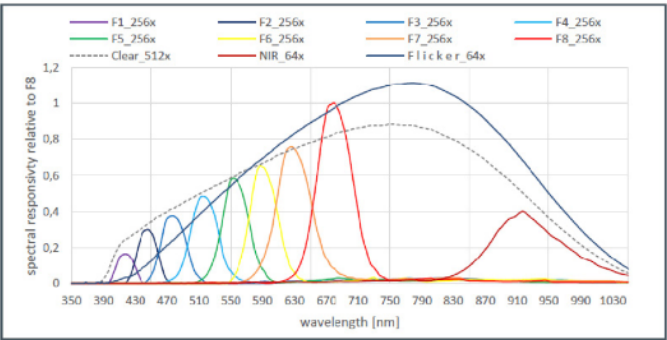


The TetraSpec system generates two types of digital number records, "6" and "7," within a range of 0 to 65,000. Calibration was performed using the Ocean Optics E65000 spectrometer and the HL-3 plus calibrated halogen light source, which provides precise measurements across the 400–1000 nm spectral range with a resolution of 0.8 nm. The calibration used a 16X gain setting and a 100 ms integration time to ensure accuracy. The calibration process significantly improves data reliability, with average calibration coefficients (MEAN [count/μW/cm²/nm]) calculated for each band. While the TetraSpec's autogain feature, along with a light diffuser, reduces light saturation, saturation is still observed in midday conditions for the CLEAR and NIR bands. Calibration coefficients for these bands are currently unavailable but will be updated in the next version of the system.

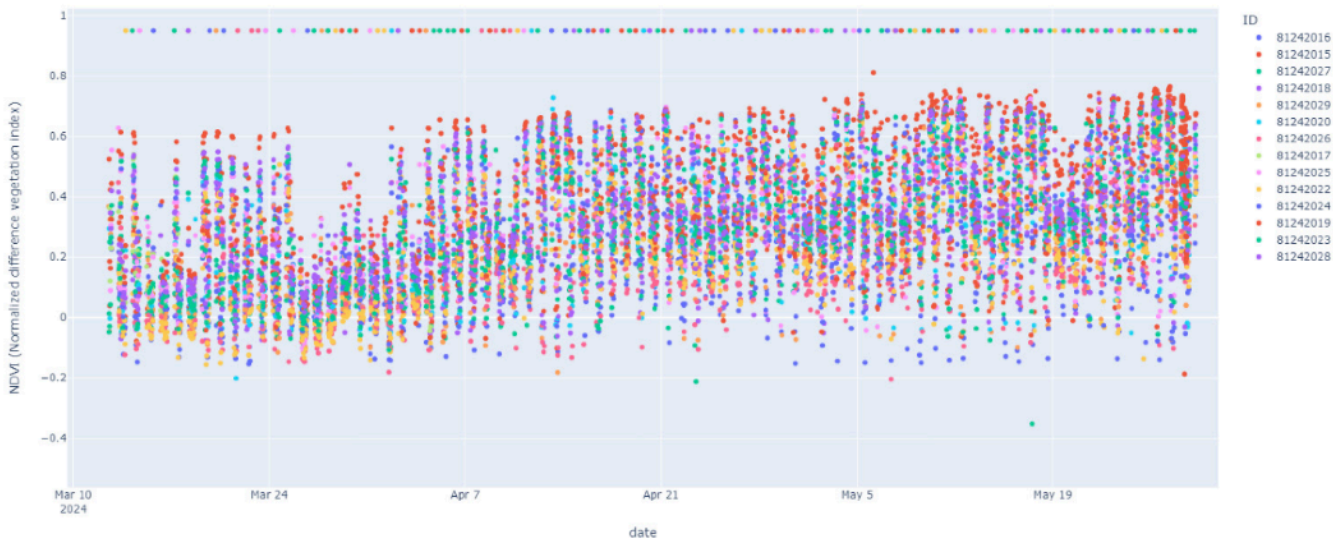

Accelerometer

The TTCyber integrates an accelerometer enabling the assessment of tree stability in response to external forces like wind, soil conditions, and physical disturbances. Every device monitors tree movement by measuring oscillations and swaying, in hourly sequence delivering quasi real time data individual trees. By analyzing resonance frequencies, accelerometers can indicate structural integrity.


Additionally, these devices detect damage through unusual movement patterns that may suggest root failure or trunk damage. Establishing movement thresholds allows researchers to identify when trees are at risk of falling. Integrating accelerometer data with other sensors, such as moisture and temperature sensors, provides a comprehensive understanding of tree health. Advanced data analytics and machine learning can further predict potential failures, aiding forest management and urban planning.

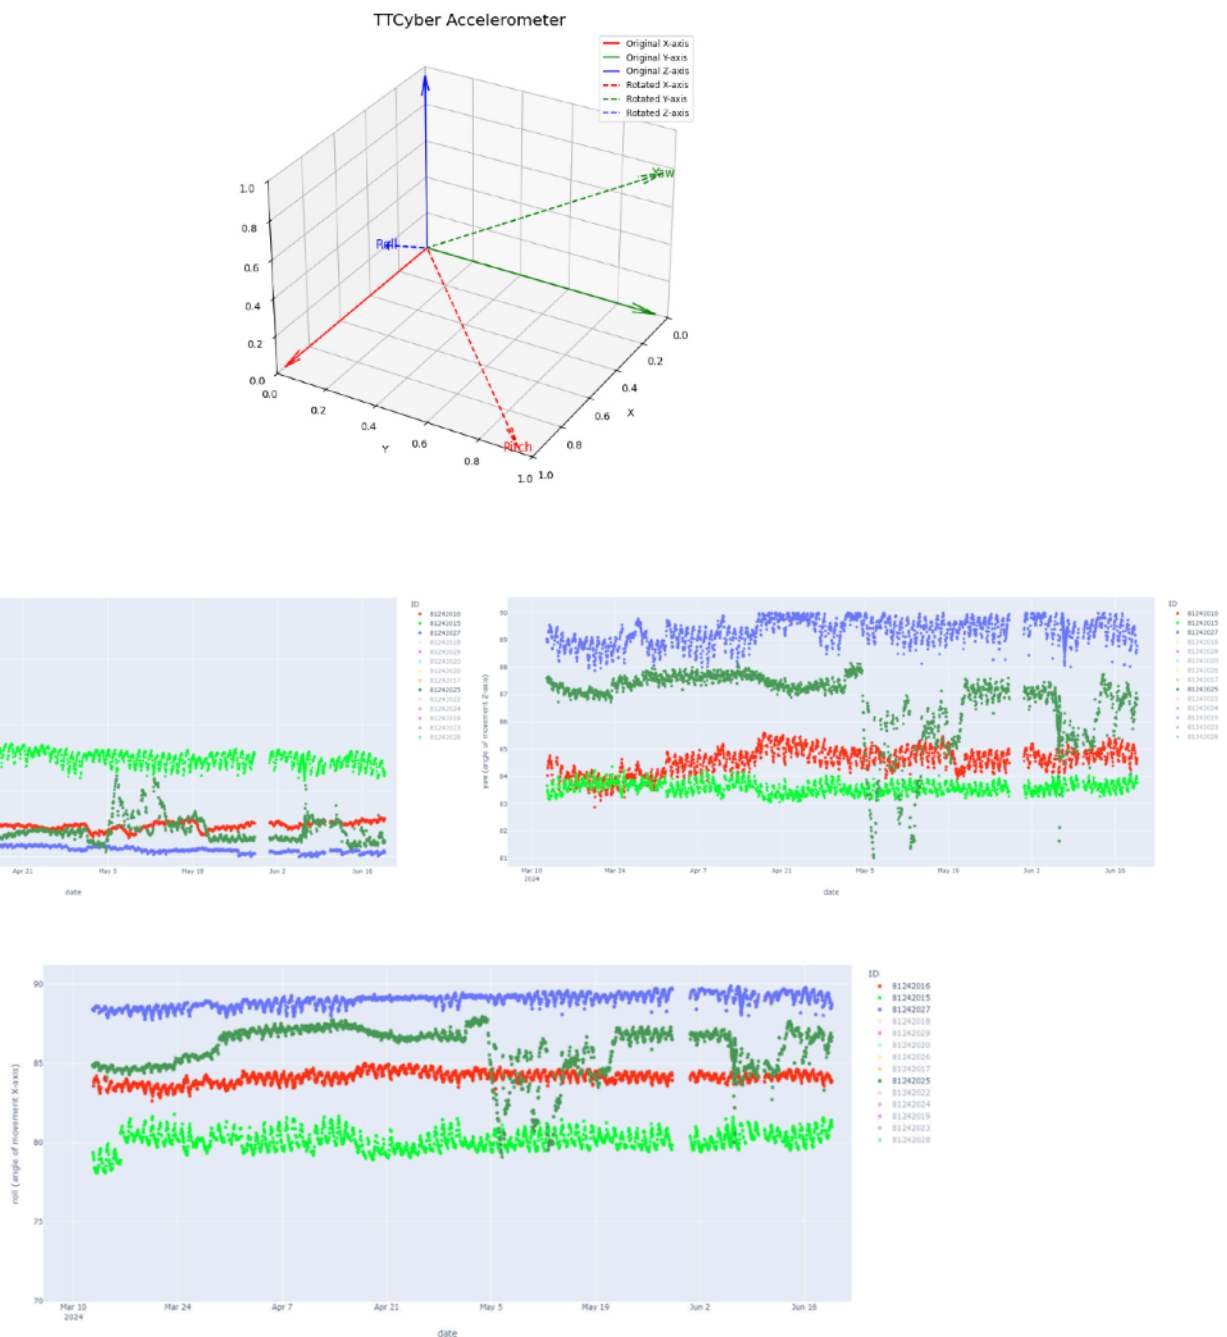

Temperature and RH

The TTCyber integrates an accelerometer enabling the assessment of tree stability in response to external forces like wind, soil conditions, and physical disturbances. Every device monitors tree movement by measuring oscillations and swaying, in hourly sequence delivering quasi real time data individual trees. By analyzing resonance frequencies, accelerometers can indicate structural integrity.

Additionally, these devices detect damage through unusual movement patterns that may suggest root failure or trunk damage. Establishing movement thresholds allows researchers to identify when trees are at risk of falling. Integrating accelerometer data with other sensors, such as moisture and temperature sensors, provides a comprehensive understanding of tree health. Advanced data analytics and machine learning can further predict potential failures, aiding forest management and urban planning.

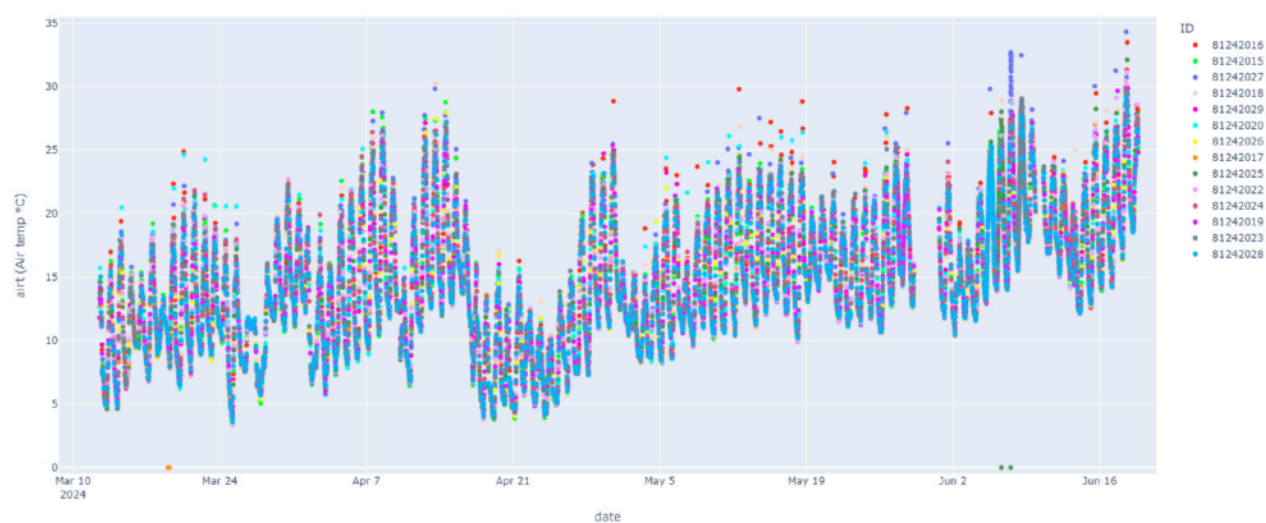

Data string 4 & 5

Every hour, TTCyber performs consecutive scans on its internal sensors, capturing and storing data locally and on a server. It provides raw, uncalibrated data as separate strings for each sensor.

Sap Velocity			
String type 4		String type 5	
03.07.24 20:11:11	date & time	03.07.24 20:11:11	date & time
81234007	ID	81234007	ID
4	string type	5	string type
199448	timestamp	201601	timestamp
0	t1	42	t6
1902	TD-1	1878	TD-6
1897	TM-1	1790	TM-6
1887	TU-1	1877	TU-6
6	t2	54	t7
1902	TD-2	1875	TD-7
595	TM-2	1819	TM-7
1885	TU-2	1876	TU-7
6	t3	66	t8
1902	TD-3	1874	TD-8
598	TM-3	1837	TM-8
1885	TU-3	1876	TU-8
18	t4	78	t9
1897	TD-4	1875	TD-9
1549	TM-4	1848	TM-9
1885	TU-4	1876	TU-9
30	t5	90	t10
1886	TD-5	1876	TD-10
1729	TM-5	1857	TM-10
1880	TU-5	1876	TU-10

Legend			
t	TD	TM	TU
time (sec)	Temp of downstream probe	Temp of heater probe	Temp of upstream probe

- The temperature records of thermistors from the TTCyber's sap flow probe are specified as string 4 and string 5. Data represents the downstream probe TD, heater TM, and upstream probe TU. The records are presented in digital format.

- Data sample:

23.08.23
15:03:17,81234007,4,199448,0,1902,1897,1887,6,1902,595,1885,6,1902,598,1885,18,1897,1549,1885,30,1886,1729,1880

23.08.23
15:03:18,81234007,5,201601,42,1878,1790,1877,54,1875,1819,1876,66,1874,1837,1876,78,1875,1848,1876,90,1876,1857,1876

Data string 6 & 7

Every hour, TTCyber performs consecutive scans on its internal sensors, capturing and storing data locally and on a server. It provides raw, uncalibrated data as separate strings for each sensor.

TTCyber Spectrometer Strings 6 & 7					
Raw data	label	MEAN (count/ μ W/cm ² /nm)	Raw data	label	MEAN (count/ μ W/cm ² /nm)
16:15:21	date & time		29.08.23 16:15:23	date & time	
81234007	ID		81234007	ID	
6	string type		7	string type	
200699	timestamp		202511	timestamp	
3	Gain		10	Gain	
117 A (410nm)		216.1	4570 F1 (415 nm)		437.27
138 B (435 nm)		140.9	5965 F2 (445nm)		362.29
190 C (460 nm)		143.7	7851 F3 (480nm)		281.41
149 D (485 nm)		68.74	9715 F4 (515 nm)		270.15
139 E (510 nm)		63.2	10719 F5 (555 nm)		219.8
130 F (535 nm)		51.89	11276 F6 (590nm)		271.58
108 G (560nm)		37.75	13308 F7 630nm)		287.04
124 H (585 nm)		46.52	15125 F8 (680nm)		349.52
82 I (645 nm)		25.75	61391 CLEAR No Calib	No calibration	
88 J (705 nm)		30.91	53401 NIR No Calib	No calibration	
120 K (900 nm)		26.91			
56 L (940 nm)		26.53			
186 R (610 nm)		47.8			
167 S (680 nm)		58.12			
260 T (730 nm)		56.67			
311 U (760 nm)		58.44			
364 V (810 nm)		58.91			
409 W (860 nm)		59.76			

- The transmitted light under the canopy records from the TTCyber's spectrometer are specified as string 6 and string 7. Data represents

- Data sample

23.08.23

15:03:17,81234007,4,199448,0,1902,1897,1887,6,1902,595,1885,6,1902,5 98,1885,18,1897,1549,1885,30,1886,1729,1880

23.08.23

15:03:18,81234007,5,201601,42,1878,1790,1877,54,1875,1819,1876,66,18 74,1837,1876,78,1875,1848,1876,90,1876,1857,1876

Data string 8

Every hour, TTCyber performs consecutive scans on its internal sensors, capturing and storing data locally and on a server. It provides raw, uncalibrated data as separate strings for each sensor.

Environmental data/tree stability/growth/battery level			
String type 8			
Raw data	label	Legend	
29.08.23 3:11:20 PM	date & time		
81234007	ID		
8	string type		
205082	timestamp		
2864	x	Tree stability data	
58	std-x		
-13312	y		
48	std-y		
-8520	z		
93	std-z		
4028	vbat	battery level in millivolts, threshold = 3750	
6196	v-stepup	Heater probe power input	
2426	airt	air temp, $2426/100=24.26^{\circ}\text{ C}$	
6025	RH	air RH, $6025/100=60.25\%$	
849	growth(d.n.)	TTCarbon record in d.n.	

- The rest of the records of Temperature, humidity, dendrometer and accelerometer are from the TTCyber's subsequent sensors and specified as string 8. Data represents all measurements as digital numbers accordingly..
- Data sample
29.08.23
15:11:20,81234007,8,205082,2864,58, -13312,48, -8520,93,4028,6196,2426,6025,849

Data Accessibility and Connectivity

TTCyber® exemplifies seamless data collection and sharing: Collected data are remotely accessible through cutting-edge Narrowband Internet of Things (NB-IoT) or Long Range (LoRa-LoRaWan) technologies.

Connectivity Choices:

NB-IoT Version: TTCyber®'s NB-IoT version boasts a 10-year prepaid SIM card (500 MB), operating autonomously without additional elements.

LoRaWan Version: For regions with weak internet signals or numerous devices (30+), the LoRa version necessitates a reachable gateway for forwarding data packets. Enhanced gateway performance is attainable with a solar panel and a potent antenna, ensuring superior operational outcomes.

User-Selectable Connectivity: Users can opt for either LoRaWAN or NB-IoT connectivity based on their requirements. NB-IoT is particularly suitable for widely dispersed trees exceeding 600 meters.

Data Access:

LoRaWan: [http://nature4cloud.org:5001/downloads/TTCyber/"serial number of each TTCyber device"/data.txt](http://nature4cloud.org:5001/downloads/TTCyber/),

NB-IoT: [http://naturetalkers.altervista.org/TTCyber/"serial number of each TTCyber device"/ttcloud.txt](http://naturetalkers.altervista.org/TTCyber/)

Informed Investment:

Data Frequency: Measurements occur at hourly intervals, adjustable to the user's preference.

Battery Management: To facilitate seamless battery replacement, it is recommended to procure at least 50% more batteries than the device count.

Charging Solution: A dedicated battery charger is imperative for optimal operational efficiency.

Data Streaming

For both the LoRaWAN and NB-IoT versions, the same type of data stream is sent to the server. This data stream, transmitted every hour, includes the transfer of string types 4, 5, 6, 7, and 8. String types 4 and 5 encompass data related to sap flow measurement. String types 6 and 7 provide information about spectral bands, while string type 8 conveys details about battery level, microclimate data, tree stability, and growth. All the data are presented in raw format. We decided to send and store raw data for the benefit of our customers so they can apply different algorithms and calibration equations according to their needs. However, we also provide a specific software for automatic conversion in biophysical units. To illustrate the raw data and strings information:

29.08.23

16:15:18,81234007,4,198354,0,2095,2090,2082,6,2095,620,2081,6,2095,623,2081,18,2091,1702,2080,30,2081,1904,2075

29.08.23

16:15:19,81234007,5,199697,42,2073,1971,2071,54,2070,2004,2070,66,2069,2023,2069,78,2069,2035,2069,90,2070,2044,2070

29.08.23 16:15:21,81234007,6,200699,3,117,138,190,149,139,130,108,124,82,88,120,56,186,167,260,311,364,409

29.08.23 16:15:23,81234007,7,202511,10,4570,5965,7851,9715,10719,11276,13308,15125,61391,53401

29.08.23 16:15:24,81234007,8,204374,2869,66,-13317,47,-8539,111,4028,6199,2438,6321,853

All strings commence with common data types, including the date and time, device ID (TTCyber device's serial number), string type, and timestamp. Currently, the date and time serve as a reliable source for understanding the precise measurement time, rendering the timestamp data unnecessary and can be disregarded due to improper firmware settings.

Each string type data will be discussed in detail in a separate section based on the type of the measured variable.


- 1. TTCyber-Sap Flow: String types 4 and 5**
- 2. TTCyber-Spectrometer: String types 6 and 7**
- 3. TTCyber-Growth: String type 8**

Training Manual

TreeTalker®Cyber installation

Guidelines & regulation

Tool list for Installation

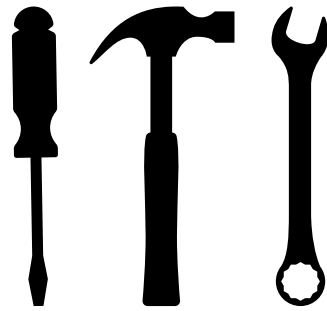

1. Electric Drill
2. Drill bit-2.2/2.3mm and 3mm
3. Metal Chisel
4. Drill guide sensor template
5. Rubber hammer
6. Phillips head screwdriver
7. Spanners 10", 11" and 12"

Included:

1. Antennas
2. Tree Belts
3. Mounting plates
4. Nuts and Bolts
5. Mounting ball

Trunk installation

Here is the revised installation procedure in a step-by-step format:

1. Prepare the TreeTalker®Cyber Trunk Installation:
 - Begin by threading the support belt through the two support plates and adjusting them as needed.
2. Attach the Ball Support Mount:
 - Connect the ball support mount to the support plate without using Velcro.
 - Install the Cyber unit with the spectrometer facing upwards.
 - Secure the device by tightening a bolt over the exposed nut, adjusting the ball support to allow for easy installation.
3. Mount the Device on the Tree:
 - Wrap the belt around the tree with the device attached, ensuring the belt is threaded correctly through the belt clip.
 - Adjust the ball joint on the support plate to set the spectrometer's line of sight. Position it to maximize canopy coverage for the most comprehensive spectral readings.
4. Install the Antenna:
 - Attach the LoRa or NB-IoT antenna to the outside of the device.
5. Connect Sensors
 - Plug in the sap flow probe on the left side.
 - Connect the dendrometer on the right side.
6. Install the Battery:
 - Insert the battery into the device.
7. Activate the System:
 - Plug in the system. The device should automatically start communicating with the server or cloud.



Following these steps will ensure that the RemoteTree is installed and configured correctly for optimal data collection.


We have included a video tutorial for the installation of the entire device.

Sap flow probe installation

1. You have been provided with a sensor guide template to install the sap flow sensor.
2. For Trees with thick bark you may have to remove the bark. Conifers and oaks. Smooth bark species such as some Eucalyptus and Fagus, for example, generally don't require bark removal.



3. Place the guide template flush with the stem and using a 2.1-2.3 mm drill bit, drill three holes into the stem using the central holes of the template. Make sure they are clean and ready for the sensor placement.

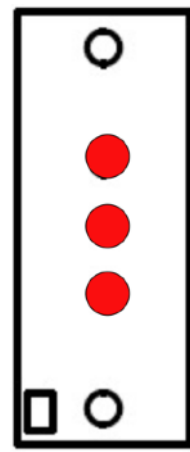

4. Gently push the sensor into the holes and use a rubber hammer to gently tap it into the stem so the sensor is flush with tree stem.



Dendrometer installation

When installing a dendrometer:

- **Conifers:** Avoid the lower side of leaning branches or stems, where dense compression wood may distort readings.
 - **Broadleaves:** Avoid the upper side, where flexible tension wood can impact measurements.
- Positioning on unaffected wood improves data accuracy.**

1. Clean the surface of the tree for installation. Remove any surface irregularities and try to place the guide template on a part of the tree that is a 90 degree face.



2. Using the guide template provided as part of the installation kit, place it vertically and flush against the stem.




3. Using the two large holes at the top and bottom of the guide template drill into stem using a 3mm drill bit with a depth of approximately 2.5cm
4. Place some glue on the end of the carbon fibre rods and insert them into the stem.



5. Thread the dendrometer box and arm over the two carbon sticks and using some glue on the arm face firmly hold the face to the cleaned part of the stem until it holds.





6. Slowly move the dendrometer box into position inline with the notch in the dendrometer arm

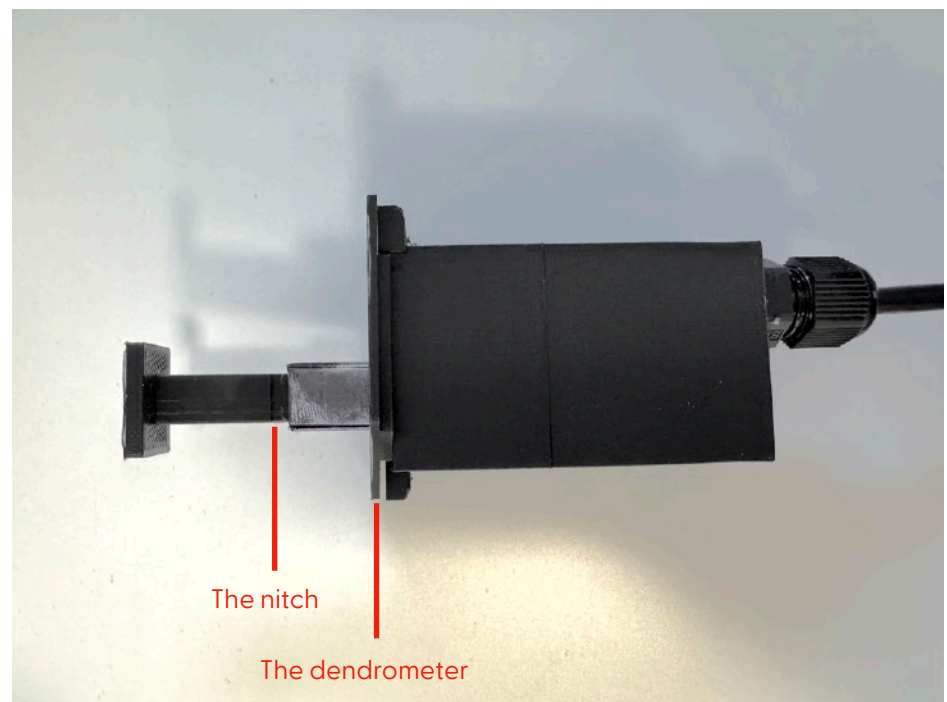

Cloud installation

1. Choose a location to install the solar panel which is exposed to most sun.
2. Mount the Cloud and the Battery in horizontal positions NOT vertical.
3. Connect the Solar Panel to the Battery.
4. Connect the Battery to the Cloud.
5. Press the button on the Cloud to activate. Press it again to deactivate.

Do Not Disconnect the Battery from the Cloud while the Battery is still connected to the Solar panel. Disconnect the battery from the solar panel and then the Cloud from the battery.

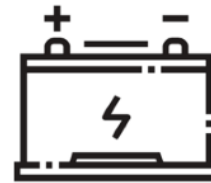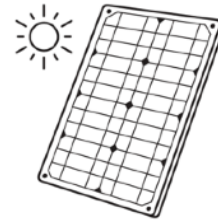

TreeTalker®Cyber Direct Interface Protocol

How to directly connect to the TreeTalker®Cyber

Below are the steps to access the TreeTalker®Cyber manually. Please be advised that this should be a last resort and must be followed carefully. After every command or a change in firmware operation for example, the device must be reset. You will find the reset button inside the device on the top left-hand corner. It is a small red button.


Step 1

Set your PC using the following steps:

1. Install the STM32cube programmer provided in the TTCyber instruction file
2. Put the below link in Arduino:
 - File
 - Preference:

https://github.com/stm32duino/BoardManagerFiles/raw/main/package_stmicroelectronics_index.json

3. Go to tool/board and install the STM32
4. Set the Arduino as below

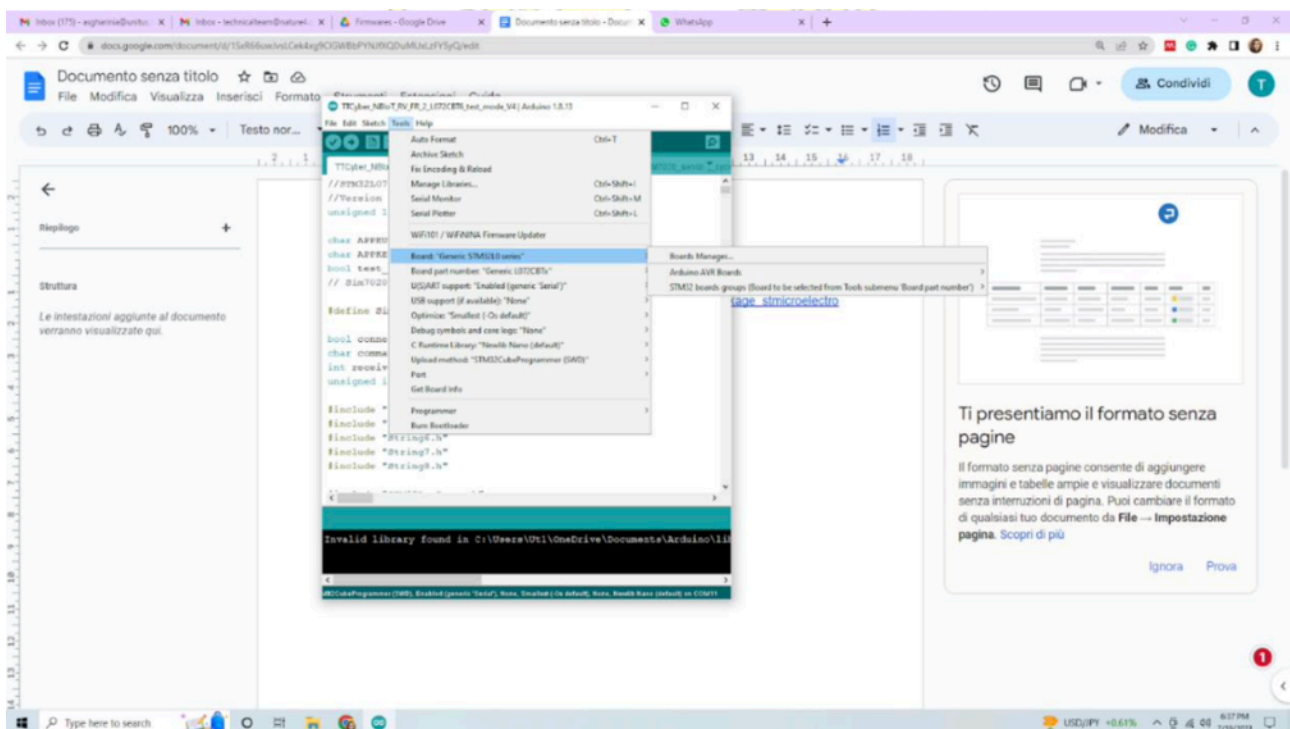

5. Copy and paste the library in... \Documents\Arduino

Step 2

To Connect the programmer to the serial ports provided inside the TTCyber as shown in the figure below, you will need to open the device. We recommend caution in doing so as wiring may be subject to breaking.



Connecting the serial cable between the TTCyber and your PC

Once the PC and the Device are connected open the SERIAL MONITOR either under the Tools ribbon or by clicking on the icon in the top right- hand corner in the Arduino IDE. If connected correctly, you will receive the following message confirming the status of the memory and components of TT Cyber:

```
Memory OK
Found LIS3!
Found SHT4x sensor!
Found AS726X sensor!
Found AS7341 sensor!
Please insert:
1 -> GO
2 -> Test mode
3 -> Device info
4 -> Serial number
5 -> APPKEY
6 -> Read Memory
7 -> Erase Memory
8 -> Factory Reset
```

The available commands for changing setting of the TTCyber are described below:

```
Please insert:
1 -> GO: Enter regular mode.
2 -> Test mode: To test the functioning of all the components of the TTCyber-With 30s
                measurement interval
3 -> Device info: To visualize device specific information's.
4 -> Serial number: To set a serial number
5 -> APPKEY: In case of LORAWAN module, setting the unique encryption key of the device to
              connect with the server. This step, if required, requires a unique pairing between the
              RAK ID and the Server
6 -> Read Memory: To read the information stored in the device memory
7 -> Erase Memory: To delete the information stored in the device memory
8 -> Factory Reset: To reset the device to the original settings.
```

Note that this does not remove the current firmware on the device.

Above mentioned commands only need the corresponding number to run or access the functions. For example, if you need the device in Test Mode Enter 1 in the Serial Monitor of the Arduino IDE.

Enter 2 in the command console of the Serial Monitor in Arduino IDE to test the functioning and obtaining test dataset of the device. First five lines should be shown as:

```
2: The selected setting option.
81237007: Device ID
accel OK: Status of the Accelerometer
TRH OK: Status of the Air Humidity and Temperature sensor.
AS7265 OK: Status of the AS7256 Spectrometer sensor.
AS7341 OK: Status of the AS7341 Spectrometer sensor.
```

The lines following will show the test datasets.

```
Accel X: 64: Accelerometer data in X- direction.
Accel Y: -480: Accelerometer data in Y- direction.
Accel Z: 16448: Accelerometer data in Z- direction.
Vbat: 4031.54: Battery Voltage (Optimum value 4000mV).
VstepUp: 6200.39: Sap flow Probe Voltage (Optimum value 6200 mV V).
H: 52.20: Air humidity value.
T: 25.84: Air Temperature value.
```

DN values for the AS7265 bands in the order previously explained in manual.

```
AS7265:
73.51,104.72,131.24,117.73,112.64,104.43,85.55,86.75,66.48,58.16,36.56,17.16,152
.20,130.14,120.16,120.58,119.34,129.63
```

DN values for the AS7341 bands in the order previously explained in manual.

```
AS7341: 3266,4758,6453,7713,8646,9127,10565,12077,20010
Growth: 1624: Growth sensor data.
NTC1: 1985.82: DN Value for the Sap Flow Probe 1 before heating.
NTC2: 1910.74: DN Value for the Sap Flow Probe 2 before heating.
NTC3: 1951.89: DN Value for the Sap Flow Probe 3 before heating.
```

Status of the heater

```
HEATER ON
HEATER OFF
NTC1: 1989.40: DN Value for the Sap Flow Probe 1 after heating.
NTC2: 235.02: DN Value for the Sap Flow Probe 2 after heating.
NTC3: 1906.02: DN Value for the Sap Flow Probe 3 after heating.
```

Status of the SIM card and uploading of the data to the Altermista link (see data access pg. 4)

```
OK
SIM7020 OK
AT+CREG?

+CREG: 0,5

OK
AT+CHTTPCREATE="http://naturetalkers.altermista.org"

+CHTTPCREATE: 0
```

OK
AT+CHTTPCON=0

OK
AT+CHTTPSEND=0,0,"/TT_cyber.php?sn=81237007&data=TEST_OK"

AT+CHTTPDISCON=0

OK
AT+CHTTPDESTROY=0

OK

The serial monitor in the Arduino will show the below overall message when the device is connected properly, and all the sensors are functioning.

Memory OK
Found LIS3!
Found SHT4x sensor!
Found AS726X sensor!
Found AS7341 sensor!
Please insert:
1 -> GO
2 -> Test mode
3 -> Device info
4 -> Serial number
5 -> APPKEY
6 -> Read Memory
7 -> Erase Memory
8 -> Factory Reset

81237007
accel OK
TRH OK
AS7265 OK
AS7341 OK
Accel X: 64
Accel Y: -480
Accel Z: 16448
Vbat: 4031.54
VstepUp: 6200.39
H: 52.20
T: 25.84
AS7265:
73.51,104.72,131.24,117.73,112.64,104.43,85.55,86.75,66.48,58.16,36.56,17.16,152.20,130.14,120.16,120.58,119.34,129.63
AS7341: 3266,4758,6453,7713,8646,9127,10565,12077,20010
Growth: 1624
NTC1: 1985.82
NTC2: 1910.74
NTC3: 1951.89

HEATER ON
HEATER OFF
Voltage step-up data OK
6187.90
NTC1: 1989.40
NTC2: 235.02
NTC3: 1906.02
AT

OK
AT+GMM

SIM7020E

OK

SIM7020 OK

AT+CREG?

+CREG: 0,5

OK

AT+HTTPCREATE="http://naturetalkers.altervista.org"

+HTTPCREATE: 0

OK

AT+HTTPCON=0

OK

AT+HTTPSEND=0,0,"/TT_cyber.php?sn=81237007&data=TEST_OK"

AT+HTTPDISCON=0

OK

AT+HTTPDESTROY=0

OK

If you update the firmware manually or run any of the commands listed between 1 and 8 in the serial monitor of the Arduino IDE, you must reset the device before deploying in the field: Press the red button inside the device to reset.

